

FIXIT WRIGHT

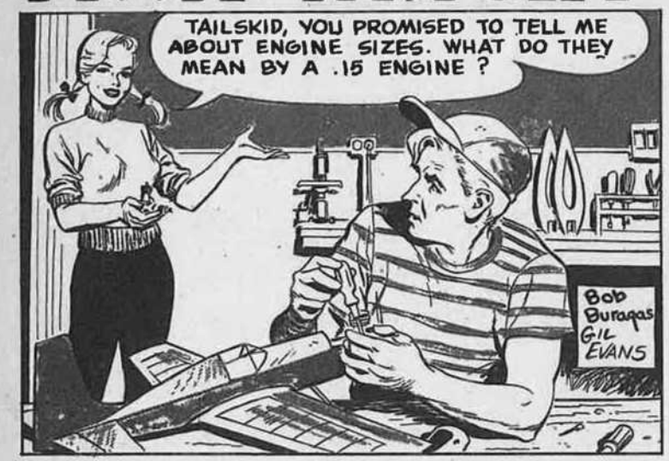

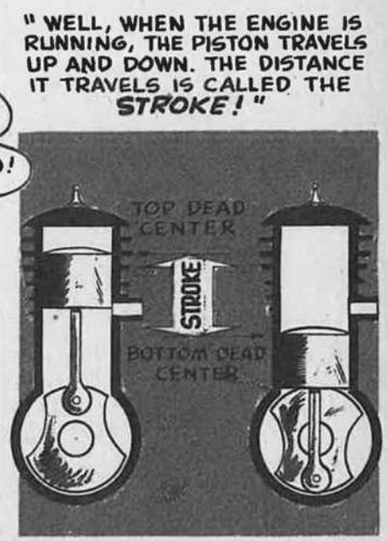















"BEFORE YOU CAN MEASURE DISPLACEMENT, YOU MUST MEASURE THE BORE.....

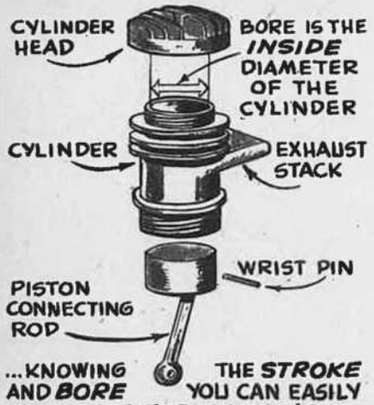

...KNOWING THE BORE AND THE STROKE YOU CAN EASILY CALCULATE THE ENGINE'S DISPLACEMENT IN CUBIC INCHES."

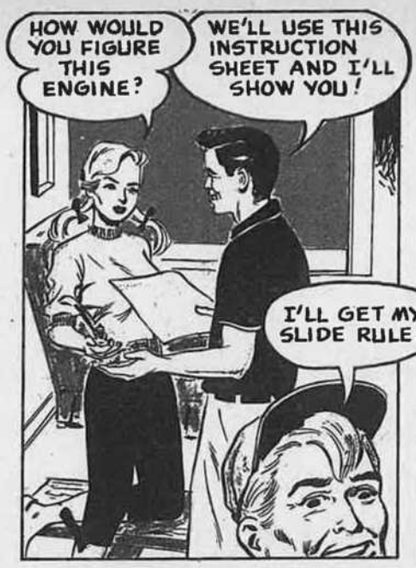



"FIRST WE HAVE TO FIGURE THE AREA OF THE BORE....."

