
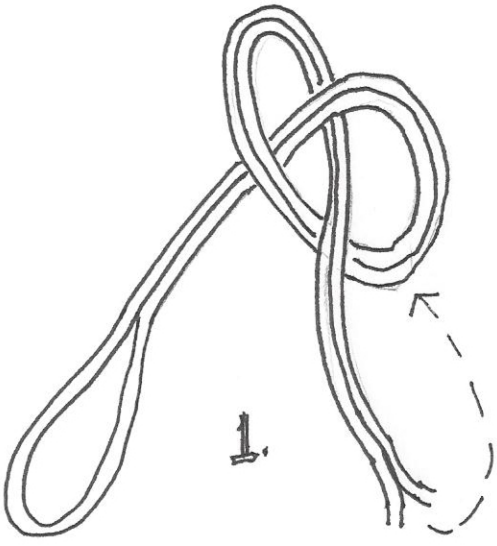


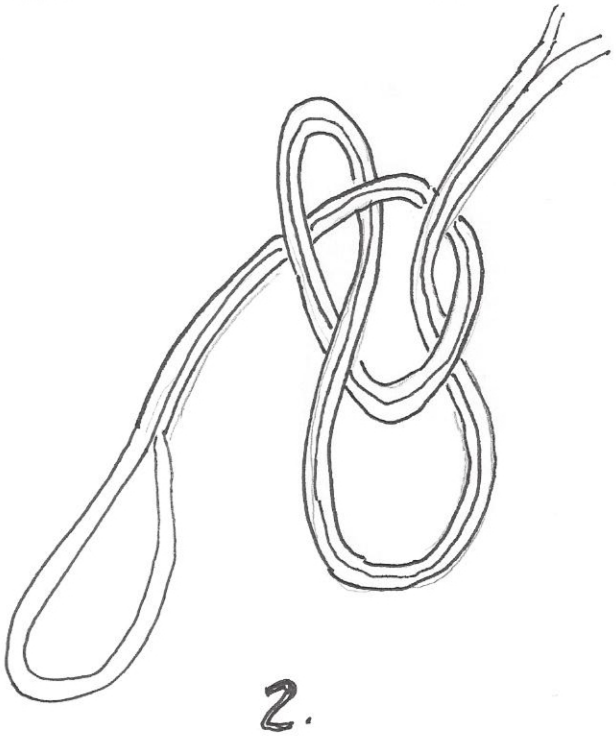

Rubber Motor Knot

1. Start with a simple overhand knot

2. Continue by passing the loose end through the loop

3. Dip the loose knot into a mixture of liquid soap and water (1:1 ratio)

4. Pull knot together with all your strength

5. Cut off excess rubber from the loose end - leave about 1 cm

6. Lubricate the motor before winding.